


Balancing Density Control and CO₂ Adsorption Capacity in MOF Synthesis using Multi-Sigma™

This case study showcases how AIZOTH's AI analytics platform, Multi-Sigma, is utilized to optimize the synthesis of Metal-Organic Frameworks (MOFs), achieving both optimal density and high CO₂ adsorption capacity

1. AI Chain Analysis

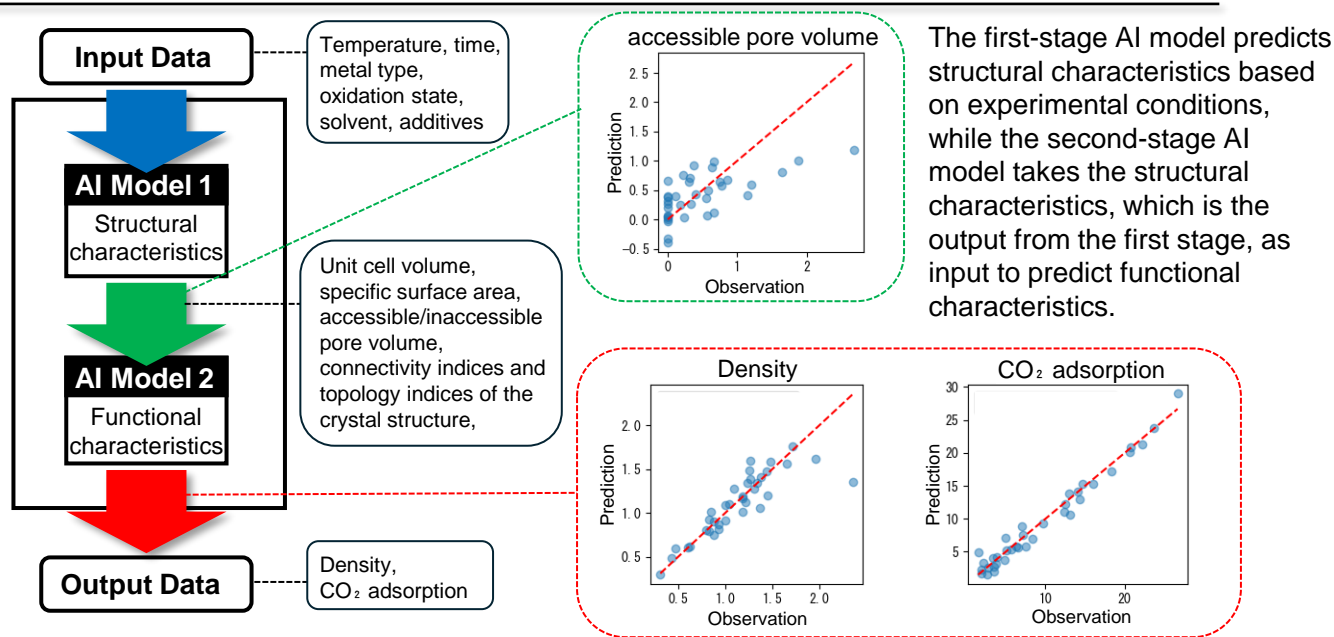

2. Factor Analysis

Impact of Synthesis Conditions

- **Synthesis time (17–20%):** The strongest factor, with control over extended durations being particularly crucial.
- **Synthesis temperature (16–19%):** The second most influential factor, requiring careful selection of the appropriate temperature range.
- **Oxidation state (9–12%):** A +2 oxidation state consistently yields stable and favorable results.


Impact of Structural Characteristics

- CO₂ adsorption capacity strongly depends on **surface area** and **pore volume**.
- Density is influenced by **unit cell volume** and **the connectivity of the crystal structure**.

3. Multi-Objective Optimization for CO₂ Adsorption and Density Control

Using Multi-Sigma's optimization functionality, a multi-objective approach was employed to maximize CO₂ adsorption while maintaining a target density of approximately 0.25 g/cm³. As a result, the following synthesis conditions were identified, achieving a density of 0.25 ± 0.005 g/cm³ and a high CO₂ adsorption capacity of 32.2:

- Synthesis temperature: 174° C
- Synthesis time: 408 hours
- Metal type: Indium
- Oxidation state: +2

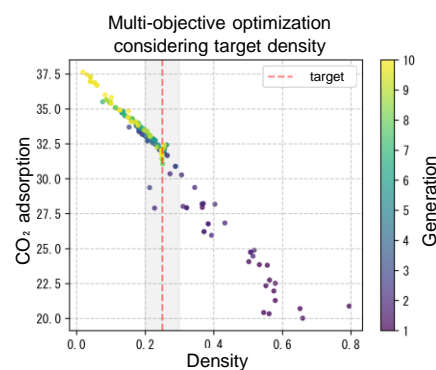

(Note 1) Data Source: Kaggle (<https://www.kaggle.com/datasets/marquis03/metal-organic-frame-materials-prediction/data>)

(Note 2) The unit of density is (g/cm³) and accessible pore volume is (cm³/g), and the CO₂ adsorption capacity is measured at a temperature of 298 K and a pressure of 16 bar.

AIZOTH inc. provides a range of AI services, including Multi-Sigma™, AI consulting, experimental condition optimization support, and contract research and development.

Multi-Sigma™ is a cloud-based AI software designed for research and development, significantly reducing experimental workload and enabling researchers to discover innovative solutions to real-world challenges with minimal experimental datasets.

<https://aizoth.com/service/multi-sigma/>
info@aizoth.com

